



SINS2 OPERATION GUIDE

AUGUST 2017



eS MFDs


eS Product Portfolio



Models:

- 6" a67 (CB-M)
- 7" eS78
- 12" eS127

eS Controls

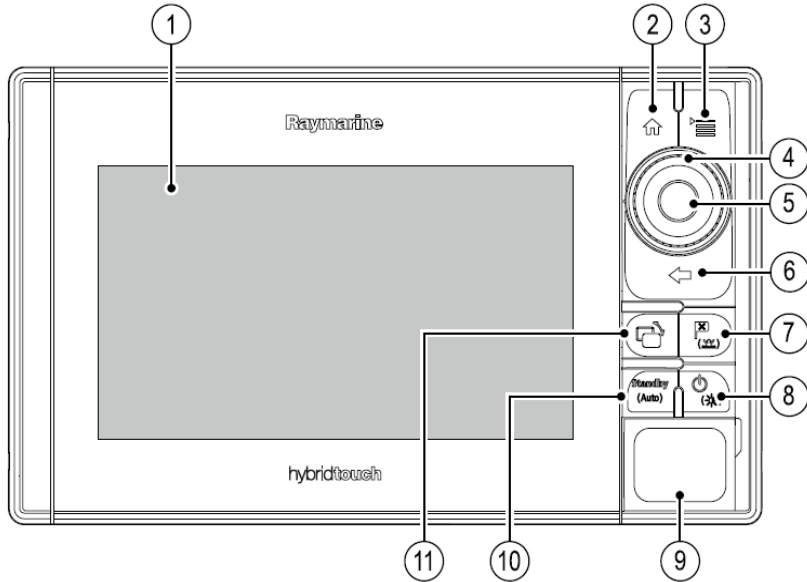

Description Functions

1. Touchscreen you can touch the screen to operate many common functions, including all menu operations.

2. Home Press to return to the Homescreen.

3. Menu Accesses menus. Press again to close menus.

4. UniControl Provides rotary and joystick control.

5. Ok Ok push button

6. Back Press to return to a previous menu or dialog level.

7. WPT / MOB • Press and release to access the waypoint options. Press again to place a waypoint. Press and hold to place a Man Overboard (MOB) marker at your current position.

8. Power • Press once to switch the unit ON. Once powered on, press the Power button again to adjust the brightness, perform a screen capture, access Powersave mode or access the power controls for external devices. Press and hold to switch the unit OFF.


9. Card reader slot Open the card door to insert or remove a MicroSD card. There are 2 card slots (labelled 1 and 2), used for electronic charts and archiving waypoint, route, track and settings data.

10. Pilot • Press to disengage integrated autopilot. Press and hold to activate Auto mode on integrated autopilot.

11. Switch Active Pane Press to switch the active pane in splitscreen pages. Press and hold to expand the screen.

eS Unicontroller Operation

- 1. Rotary — use to select menu items, move the onscreen cursor, and adjust the range in the Chart and Radar applications.
- 2. Directional control — use to move the cursor position in applications, pan up, down, left and right in the Chart, Weather and Fish finder applications or to cycle through data pages in the Data application.
- 3. OK push button — push in to confirm a selection or entry.

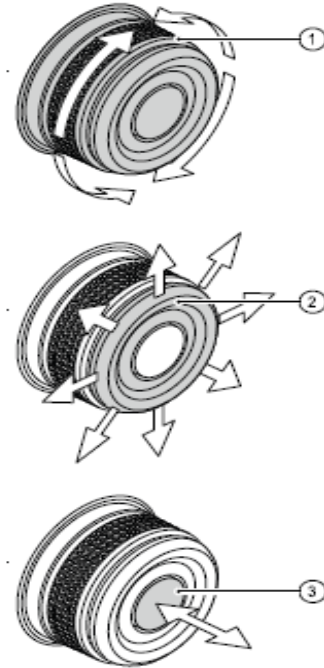

Data Master

- Any system containing more than one networked multifunction display must have a designated data master.
- The data master is the display which serves as a primary source of data for all displays, it also handles all external sources of information.
- For example: Systems requiring heading information from the EV Sensor and GPS antenna, are initially received through the SeaTalking network to the Data Master Display. The data master then bridges the data to the Raynet ethernet network and repeats to all other MFD displays.


Information shared by the data master includes:

- Cartography
- Routes and waypoints
- Radar
- Sonar

Operation




Initial Startup Procedure

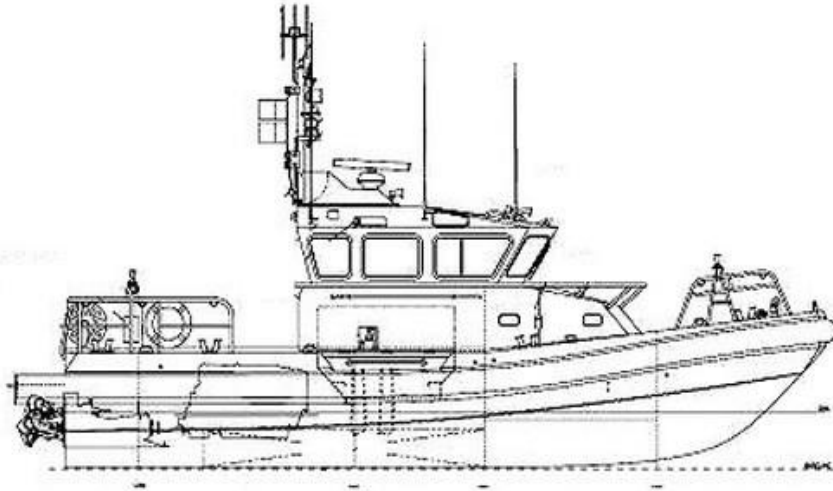


1. Language
2. Boat type
3. Configure Units (Units of measure)
4. Boat Details (Parameters)

Initial Startup Procedure

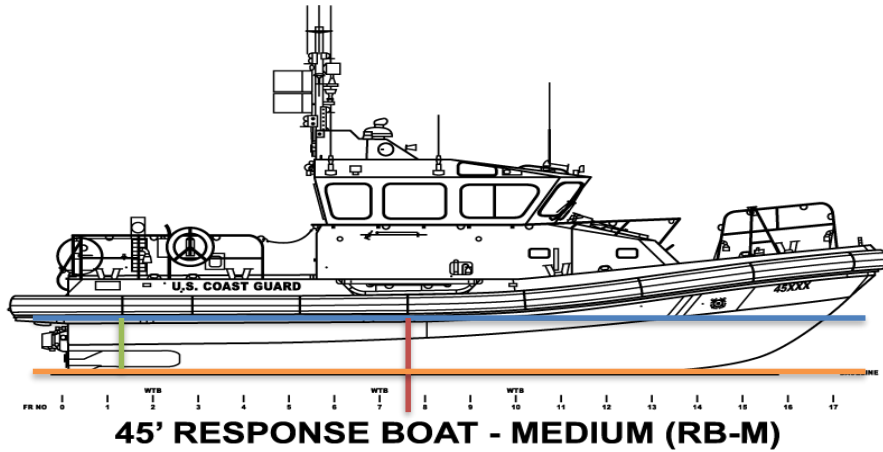


1. Waterline
2. Maximum Vessel Draft
3. Safety Margin
4. Minimum Safe Depth

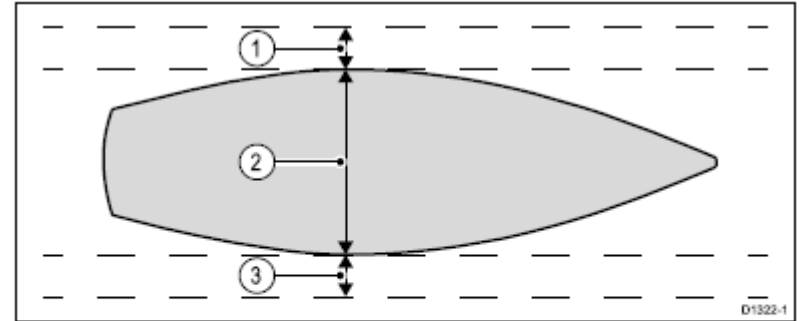

1. Port safety margin
2. Maximum Vessel Width (Beam)
3. Starboard safety margin

Initial Startup Procedure

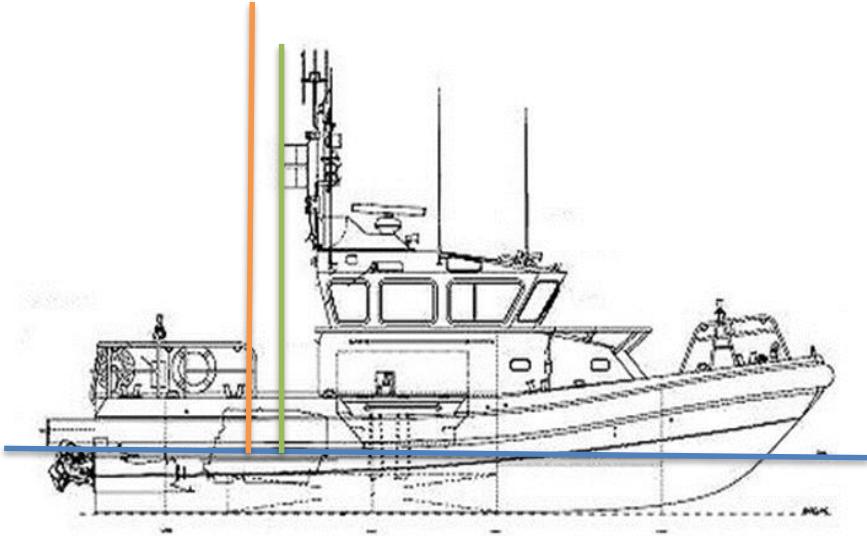

1. Waterline
2. Maximum height from waterline
3. Safety Margin

← Select Data Master Display X

Select a display to be the data master.
(This is normally the display that bridges data to/from STng.)

	Type	Serial No.
✓	eS78	E70265 0350 138 (This Display)
	e165	E70025 0720 004
	eS128	E70285 0650 014

Home screen



a Series



eS Series

Note: Touchlock disables the Touchscreen to prevent accidental use. Selecting the icon enables Touchlock, to disable Touchlock, use the UniControl to select the TouchLock icon again.

Applications

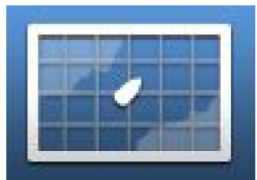


Chart application — provides a 2D or 3D graphical view of your charts to help you navigate. Waypoint, route, and track functions enable you to navigate to a specific location, build and navigate routes, or record where you've been. Chart cards provide higher levels of detail and 3D views.



Radar application — with a suitable radar scanner, you can use the radar application to track targets and measure distances and bearings. A number of automatic gain presets and color modes are provided to help you get the best performance from your radar scanner.





Sonar (Fishfinder) application — with a transducer and a sonar variant MFD or compatible Sonar module, you can use the Sonar application to help you accurately distinguish between different targets, bottom structure, and underwater obstacles. You can also view water depth and temperature data and mark points of interest.





Data application — view system and instrument data on your MFD, for a range of compatible instruments. Use the joystick or touchscreen to scroll through the available data pages.

Applications

	<p>Thermal cam application — view and control a thermal camera using a compatible MFD.</p> <p>Note: The thermal camera application is not available on a6x and a7x variant MFDs.</p>
---	--

	<p>Doc Viewer — view pdf documents stored on a MicroSD card.</p>
--	---

	<p>User Manual — Opens the English version of the product user manual stored on the display. To open translated user manuals stored on memory card use the Doc Viewer.</p>
--	---

	<p>Camera application — view a video or camera source on your MFD.</p>
--	---

Note: Camera applications are none applicable to CG assets.

Note: The User Manual Application takes an extremely long time to upload and the space bar does not currently work in the “Find” function.

Customizing the Home screen



Changing an existing page on the Homescreen with the homescreen displayed:

1. Select Customize.
2. Select Homescreen.
3. Select Edit Page.
4. Select the page icon that you want to change. The Customize menu options are displayed.
5. Select the appropriate page layout (for example, “Split screen”).
6. Select the application(s) you want to display on the page, either by selecting the relevant menu item or dragging it over to the displayed page.
7. Select Finish. The Rename Page dialog is displayed.
8. Use the on-screen keyboard to name the page, then select Save.


Customizing the Homescreen

1. From the Homescreen, select Customize.
2. Select Homescreen.
3. Select Lock Homescreen.
The onscreen keyboard is displayed.
4. Enter the password that you want to use.



The Homescreen, Databar and Data application layout and configuration are now locked


Chart Application

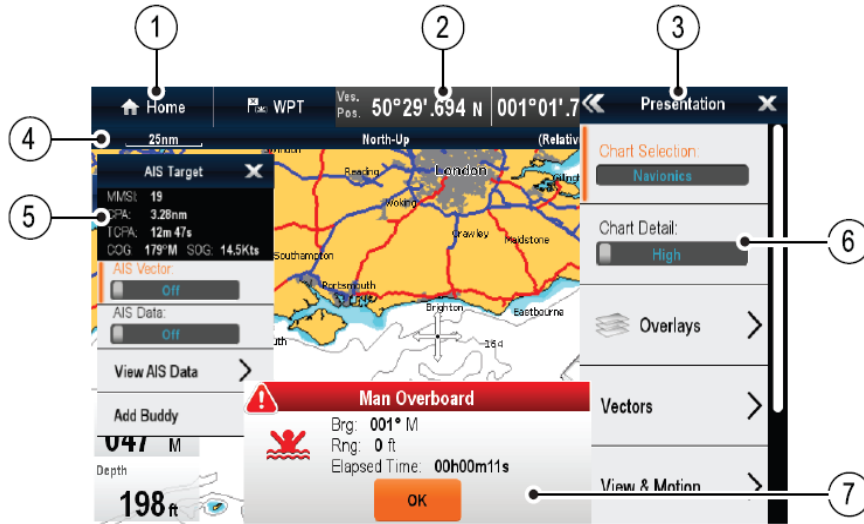

Screen item	Description
1	<p>Home</p> <ul style="list-style-type: none"> • Displays with a touchscreen — Select the onscreen Home icon to access the Homescreen. • Non-touchscreen and HybridTouch displays — Use the physical Home button to access the Homescreen.
2	<p>Databar — provides information about your vessel and its environment. The type of information in the databar can be customized from the Homescreen > Customize > Databar Set-up menu, if required.</p>
3	<p>Menu — menu options are specific to the application that you are currently using.</p>
4	<p>Status bar — provides information specific to each application. This information cannot be edited or moved.</p>
5	<p>Context menu — provides information and options specific to each application.</p>
6	<p>Menu options — menu options are displayed when the Menu is selected.</p>
7	<p>Pop-up messages — alert you to a situation (such as an alarm), or unavailable function. Pop-up messages may require a response from you — for example, select OK to silence alarms.</p>

GPS Status

- 1. Sky view
- 2. Satellite status
- 3. Position and fix information

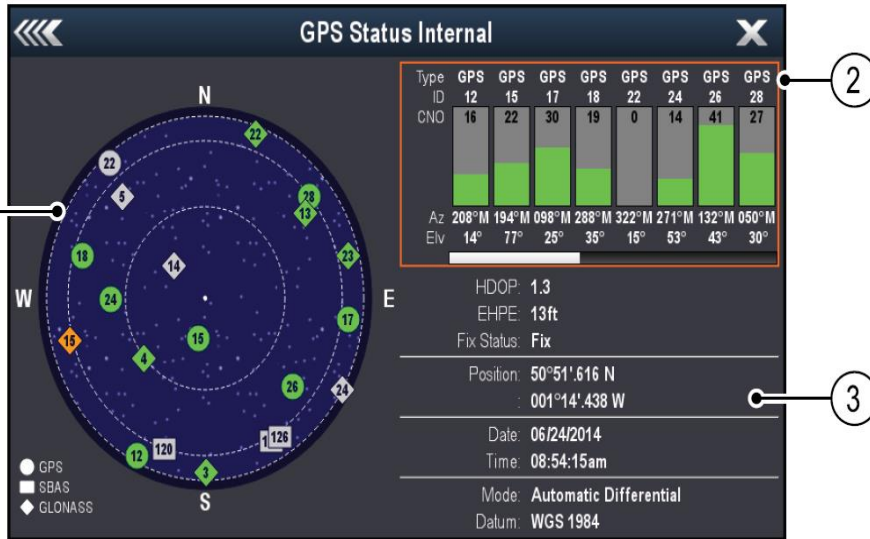

Circle — A circle identifies a satellite from the GPS constellation.

Diamond — A diamond identifies a satellite from the GLONASS constellation.


Square — A square identifies an (SBAS) differential satellite. i.e. WAAS

Alarm Management


The Alarm Manager is used to configure the behavior of alarms and to manage alarm activity.

The Alarm Manager can be used to:

- Enable and disable alarms
- Adjust alarm thresholds
- View alarm history
- View list of currently active alarms

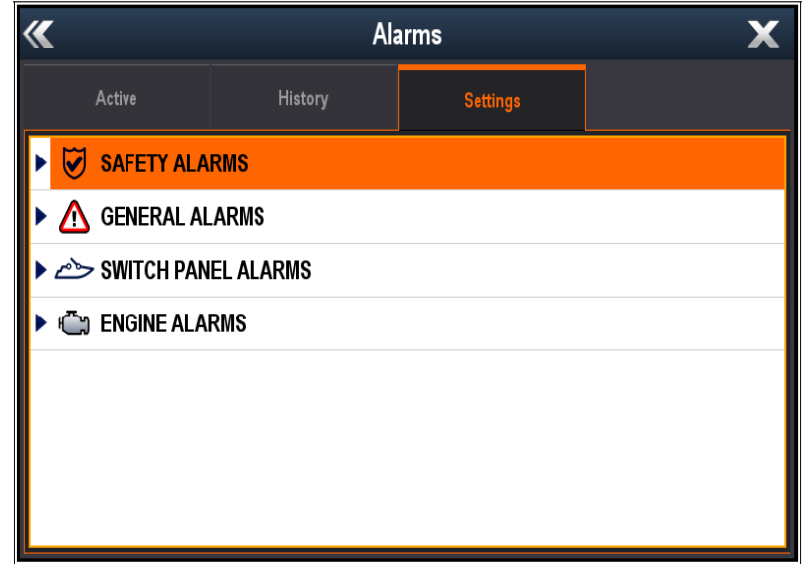

MOB Alarm

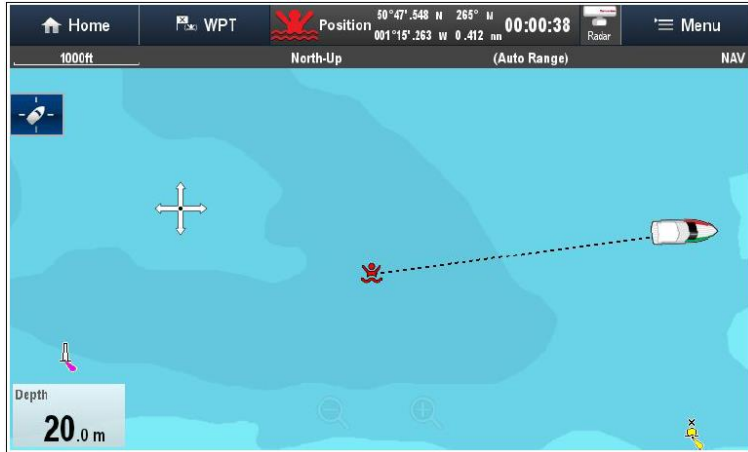

Press and hold WPT / MOB for 3 secs to activate

Press and hold WPT / MOB for 4 seconds to cancel

WPT button		<ul style="list-style-type: none">• c Series• e Series• eS Series• RMK-9 keypad
WPT icons		<ul style="list-style-type: none">• a Series• gS Series



DSC Distress Alert



DSC Distress Alert

Undesignated Distress

Distressed Vessel: **235899934**

Position: **50°50'.180 N**
: 001°15'.429 W


Time Sent: **10:41:00**

Place Waypoint **Goto Vessel** **Clear Message**

You can connect your DSC VHF radio to your multifunction display and show distress message information and GPS position data for other vessels




AIS Overview

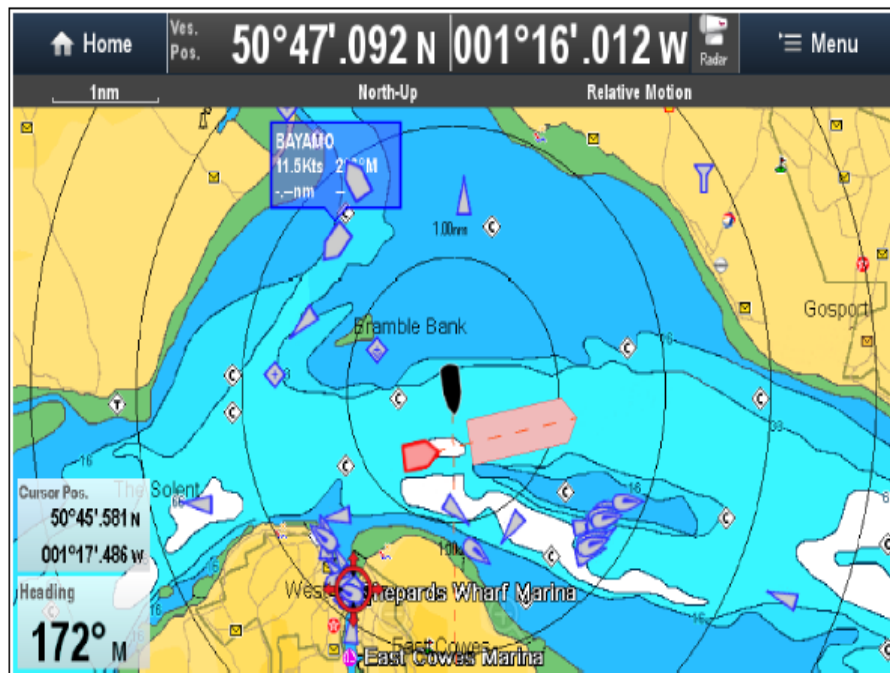

AIS target types

	Unknown vessel type		Yacht
	Commercial vessel		High speed
	Land based station		* Blueforce
	SAR (Search and Rescue Aircraft)		AToN (Aid To Navigation)
	Virtual AToN		SART (Search and Rescue Transponders)



Vectors can be displayed for AIS targets.

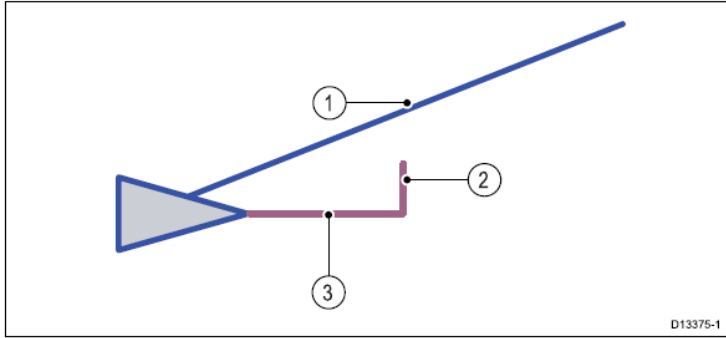

1. **COG vector** — The length of the COG vector predicts the distance the target will travel within a specified time period. The COG vector can be set to 'Relative' (Orange) or 'True' (Blue) motion.
2. **Rate of turn** — Class A targets, if available can display a Rate of Turn (ROT) indicator.
3. **Heading** — The Heading line is a fixed length.


Needs a screenshot of
True motion and
Relative motion vector
capabilities!

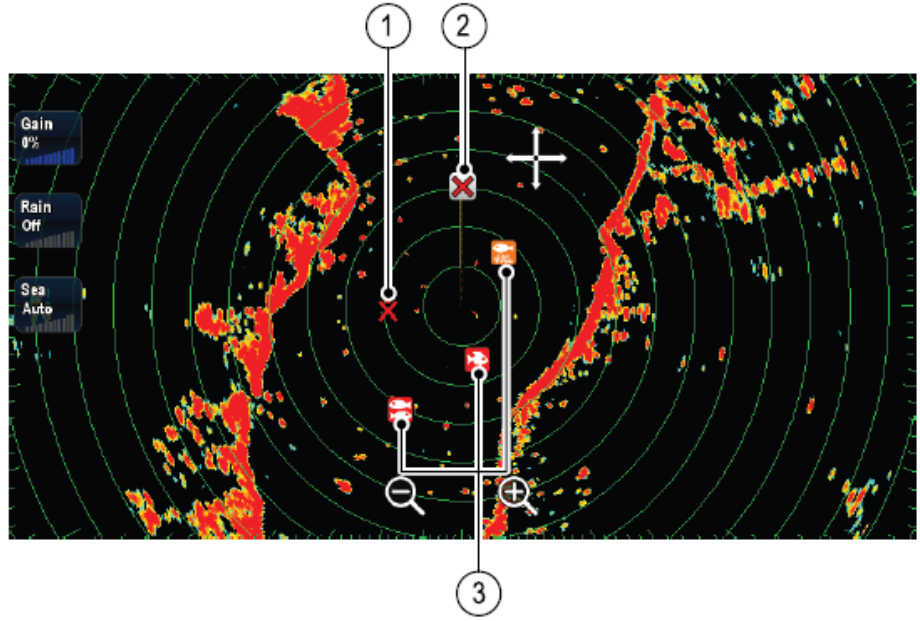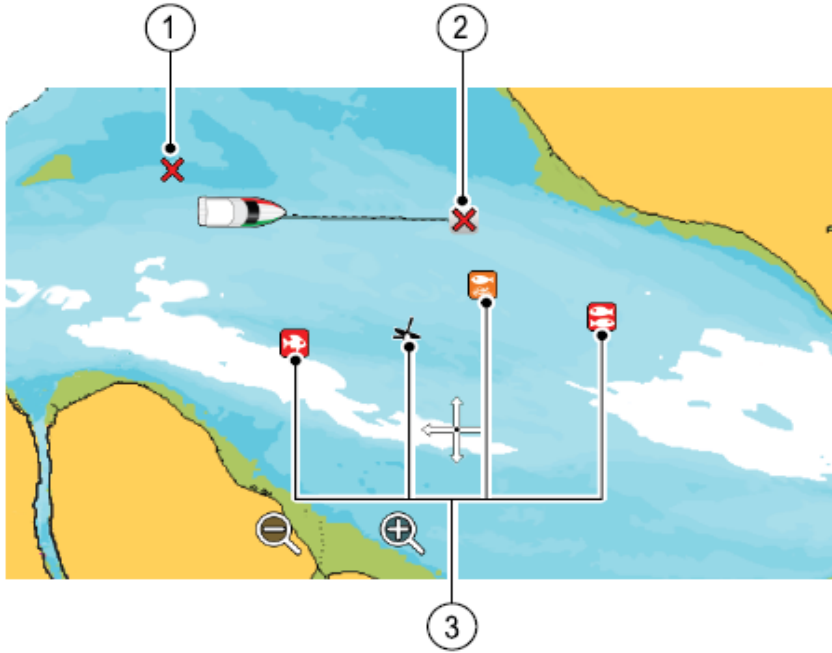

Waypoints




- 1 Inactive waypoint
- 2 Active waypoint
- 3 Alternative waypoint symbols

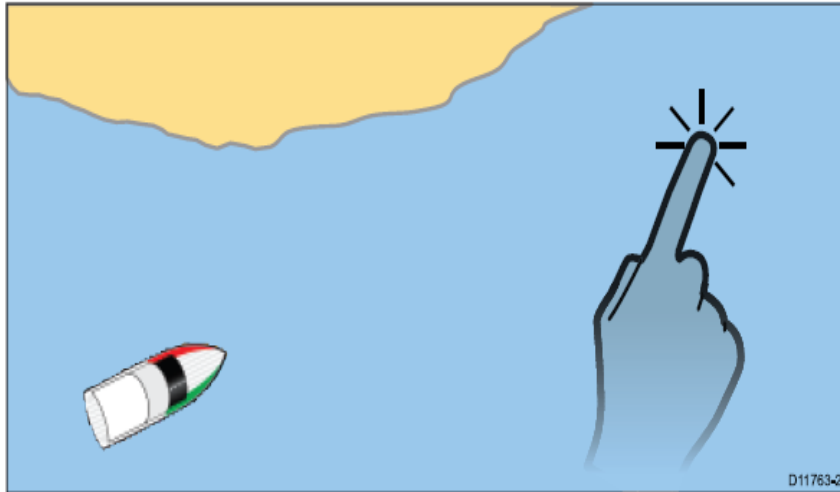Waypoint Placement




WPT button		<ul style="list-style-type: none">• c Series• e Series• eS Series• RMK-9 keypad
WPT icons		<ul style="list-style-type: none">• a Series• gS Series

Placing a waypoint at a known position (lat/long)

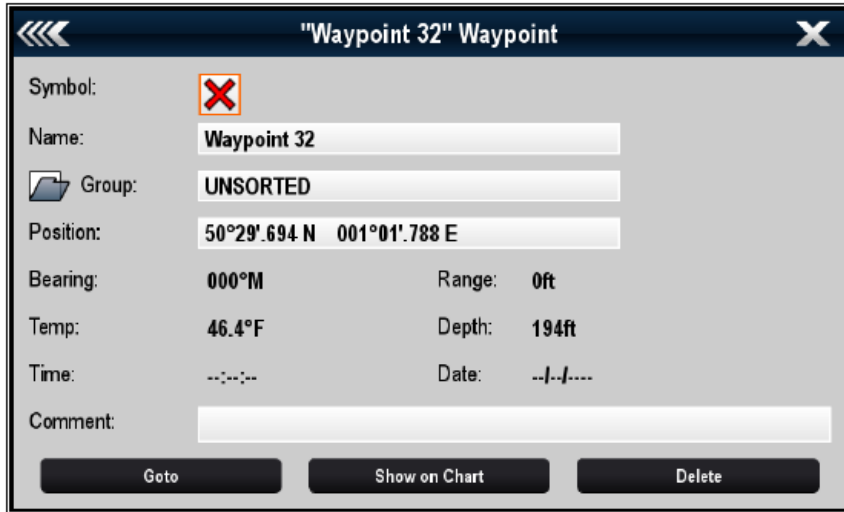

"Waypoint 32" Waypoint

Symbol: 

Name:

Group:

Position:

Bearing: Range:


Temp: Depth:

Time: Date:

You can place a waypoint at a specified location using latitude and longitude coordinates:

1. Select WPT.
 2. Select Place Waypoint At Lat/Long.
- The waypoint details dialog is displayed.


Waypoint List

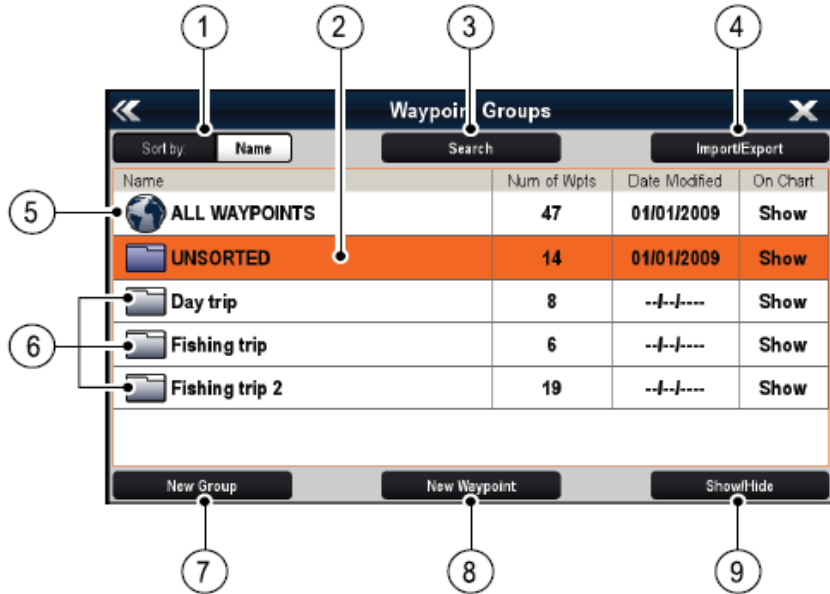

The Waypoints list is accessed from the menu:

Menu > My data > Waypoints

Routes

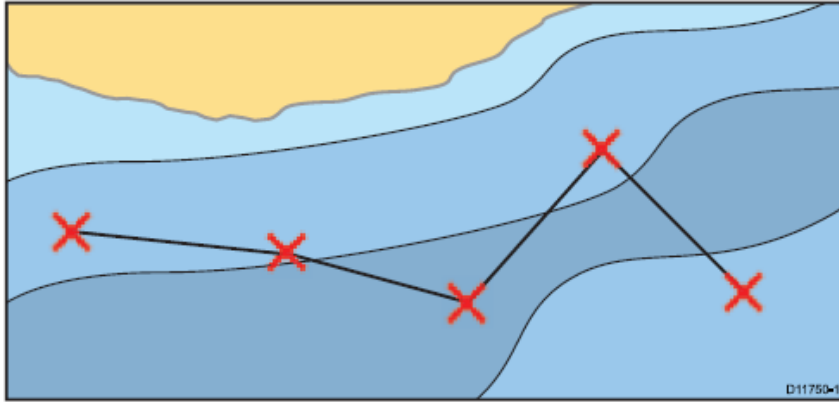

A route can consist of a combination of:

- New waypoints
- Existing waypoints
- An existing track


Building a Route



Route features are accessed from the chart application:

- by selecting an existing route.
- by using the Build Route option from the chart context menu.
- by using the Chart application menu: Menu >Navigate > Follow Route or Build Route.

Tracks

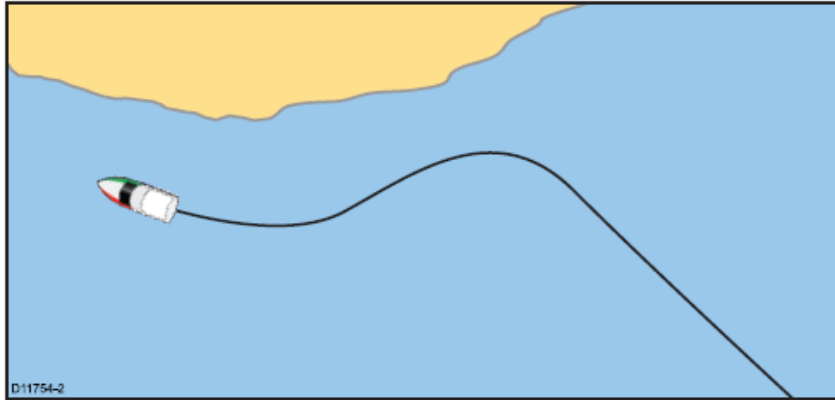

Tracks can be used to make a permanent record of where you have been. Tracks are made up of track points that are created automatically at specified intervals.

Creating a track

Needs a screenshot!

From the chart application menu:

1. Select Navigate.
2. Select Start Track. The start track pop up message is displayed.
3. Select OK.

Chart Call-outs

Touching an area or object opens the Call-out. The Call-out will close automatically after 10 seconds.

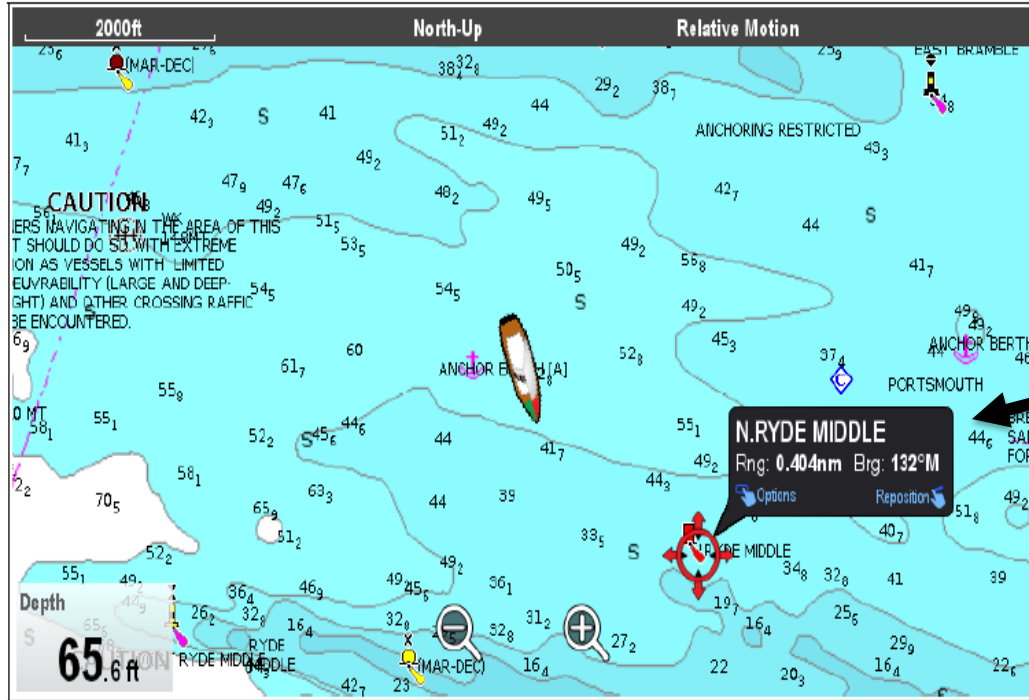


Chart Point ✕

Lat: 50°29'.266 N
Lon: 000°14'.062 E
Rng: 19.1nm Brg: 240°M


Goto Cursor




Place Waypoint

Chart Objects >

Find Nearest >

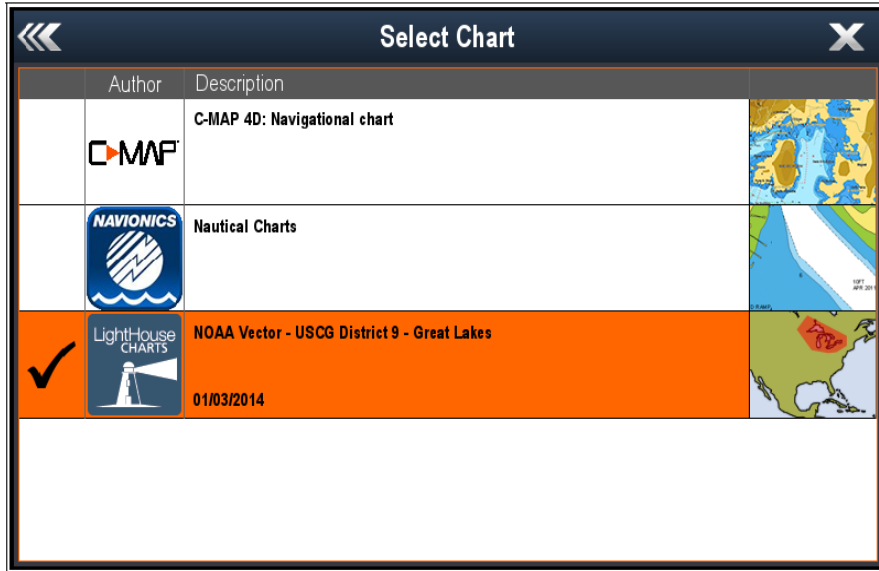Chart Selection



Select Chart	
Author	Description
	C-MAP 4D: Navigational chart
	Nautical Charts
	NOAA Vector - USCG District 9 - Great Lakes 01/03/2014

- From the Chart application menu:
1. Select Presentation.
 2. Select Chart Selection. A list of available cartography is displayed.
 3. Select the cartography type you want to display the Chart window is re-drawn to show the select cartography type.

Chart Overlays

From the Chart application menu:

1. Select Presentation.

2. Select Overlays.



- AIS
- Radar
- Databoxes
- Chart grid
- Chart Text
- Range Rings
- Boat Icon Size
- Waypoint Names
- Route / Track Widths


Data Boxes



From the Chart application menu:

1. Select Presentation.
2. Select Overlay.
3. Select Databoxes.
4. Select Databox 1 > On.
5. Select Databox 2 > On.

Chart Vectors

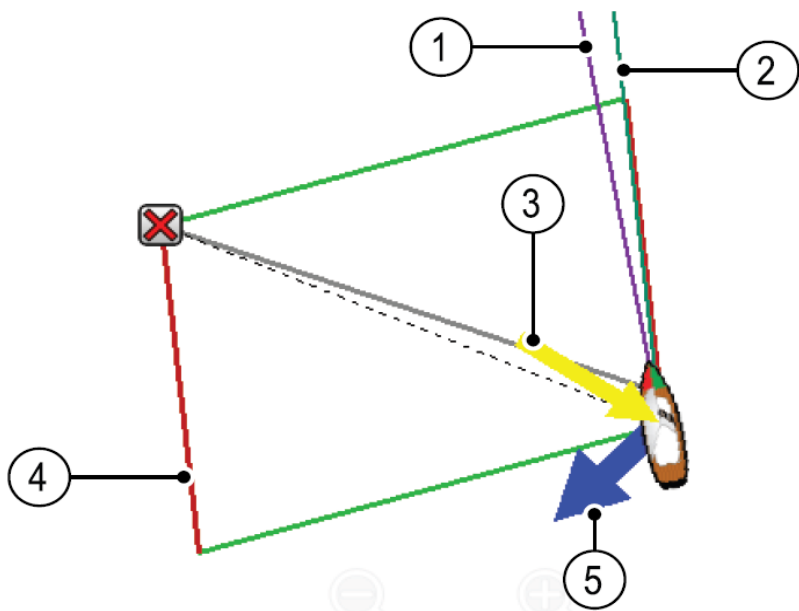


- From the Chart application menu:
1. Select Presentation.
 2. Select Vectors.


Item	Descriptions
1	Heading vector — a purple line shows the vessel's current heading.
2	COG vector — a dark green line indicates the vessel's actual Course Over Ground.
3	Wind arrow — wind direction is displayed as a yellow line with solid arrow heads pointing towards your vessel, indicating the wind direction. The width of the arrow indicates the wind strength.
4	Laylines — show the most efficient way for a sailing vessel to reach its destination, given present wind conditions.
5	Tide arrow — tide is displayed as a blue line with solid arrow head pointing away from your vessel, in the direction of the tidal set. The width of the arrow indicates the tide strength.

Chart Objects

Low

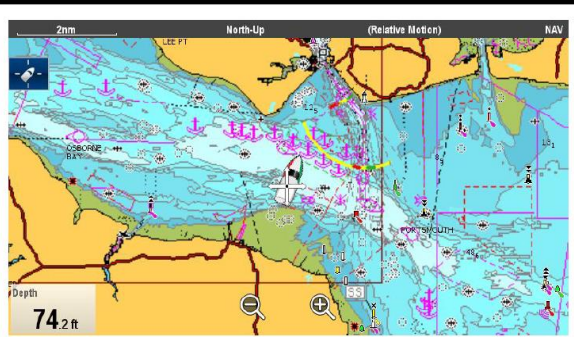

High

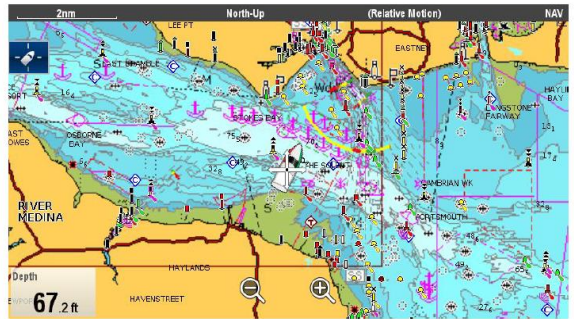

- **Nav. Marks** - Determines whether navigation marks are displayed.
- **Nav. Mark Symbols** - Determines which set of navigation mark symbols is used — International, or US. (These symbols correspond to paper charts).
- **Light Sectors** - Determines whether the sector of light cast by a fixed beacon is displayed.
- **Routing Systems** - Determines whether routing data is displayed.
- **Caution Areas** - Determines whether caution data is displayed.
- **Marine Features** - Determines whether the water-based cartographic features such as cables, tide and current stations and port information etc. is displayed.
- **Land Features** - Determines whether land-based cartographic features such as buildings, towers, masts and coast guard stations etc. are displayed.

Measuring distances and bearings

You can determine the distance and bearing:

- From your vessel to the position of the cursor;
- Between two points on the chart


Needs a screenshot!

From the chart application:

1. Select the location on screen that you want to measure the distance or bearing from your vessel. The chart context menu will be displayed.
2. Select MEASURE
 - The following will happen:
 - The measure menu will be displayed
 - A line will be drawn from the cursor position to the center of the screen.
 - The cursor location will be moved at the center of the screen
 - The Bearing and distance will be displayed next to the new cursor location.
3. From the measure menu select FROM so that Ship is selected.
 - The ruler line is re-drawn from the cursor position to your vessel.
4. You can now adjust the ruler position by moving the cursor to the desired location.
5. If you want the ruler displayed after you have closed the measure menu, select RULER: so that ON is highlighted. Selecting ruler will switch the Ruler On and Off
6. Select Back or OK to close the measure menu leaving the current measurement on-screen

Sonar Application

Example CHIRP screen

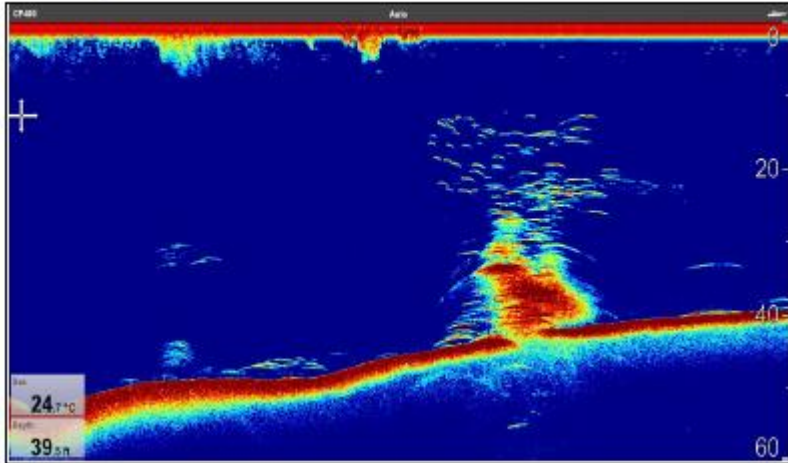

Your multifunction display supports multiple active sonar modules on the same network.

Select your Channel



From the Sonar application:

1. Select Menu.
2. Select Channel. The Channel selection page is displayed.
3. Select the tab for the sonar module you want to use. A list of available channels for the selected sonar module is displayed.
4. Select a channel from the list.

Module and Transducer Selection


Sonar module selection

- Sonar and DownVision™ variant displays are fitted with an internal sonar module.
- All variants allow you to connect a compatible external sonar module or use an internal sonar module from a networked display.
- The sonar channel you want to use must be selected from the Sonar application menu.

Transducer selection


- Sonar variant displays allow direct connection of a Raymarine sonar transducers
- DownVision™ variant displays allow direct connection of Raymarine DownVision™ transducers.
- All variants allow the connection of a Raymarine sonar transducer via a compatible external sonar module.
- For all variants use the Transducer Set-Up menu in the Sonar application to specify the transducer you want to use.

Radar Application

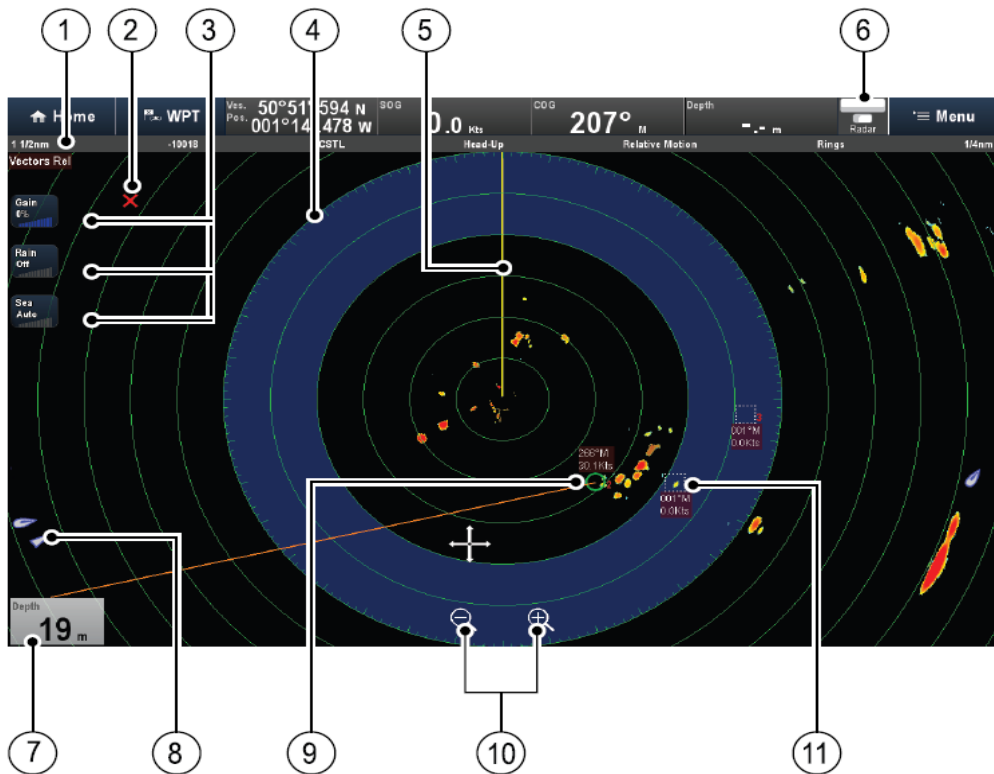

1	Radar status bar displaying: <ul style="list-style-type: none"> • Range • Radar scanner serial number • Gain mode • Orientation • Motion mode • Range ring spacing
2	Waypoint
3	Onscreen controls (Touchscreen multifunction displays only.)
4	16.12 Guard Zone
5	Ship's Heading Marker (SHM) (Your vessel's dead ahead bearing is indicated by the SHM. If the cursor is placed over the SHM, it will temporarily be removed to help placing markers or acquiring targets etc.)
6	Radar status (Displayed in the databar)
7	Databox overlay
8	Automatic Identification System (AIS) target
9	Acquired 16.9 Mini Automatic Radar Plotting Aid (MARPA) target
10	Range controls (Touchscreen multifunction displays only.)
11	MARPA target being acquired


Powering up Radar

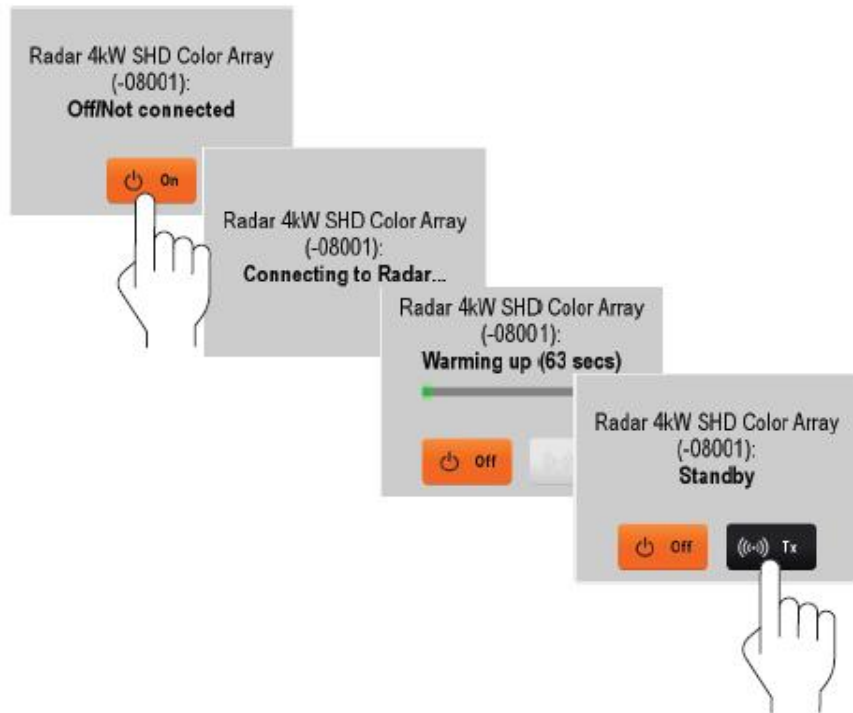

Data Application


The Data application enables you to view data generated by the multifunction display or data that is available on your system.

(Note: Fuel and Environment will not be available.)

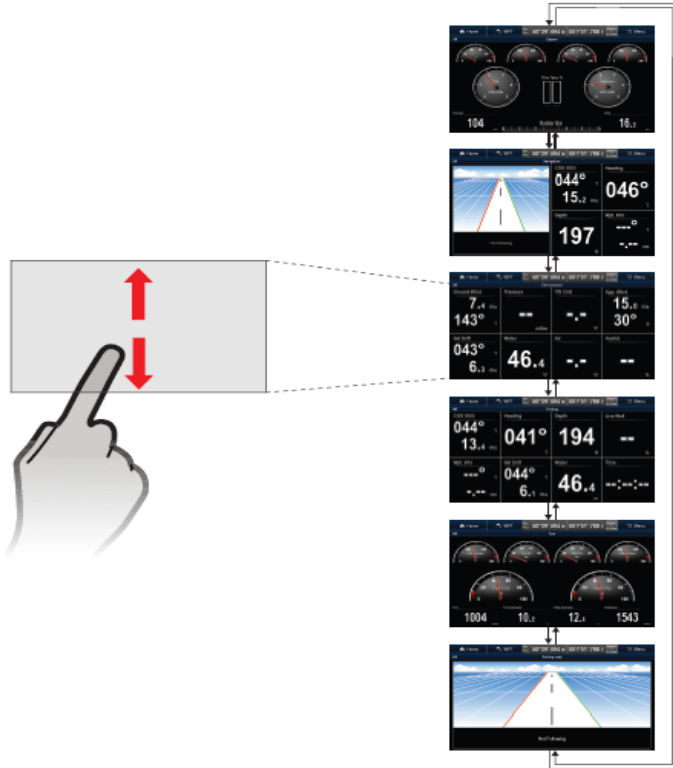

Motor vessel	
Page number	Page
1/6	Engine
2/6	Navigation
3/6	Environment
4/6	Fishing
5/6	Fuel
6/6	Rolling road

Customizing Data Application

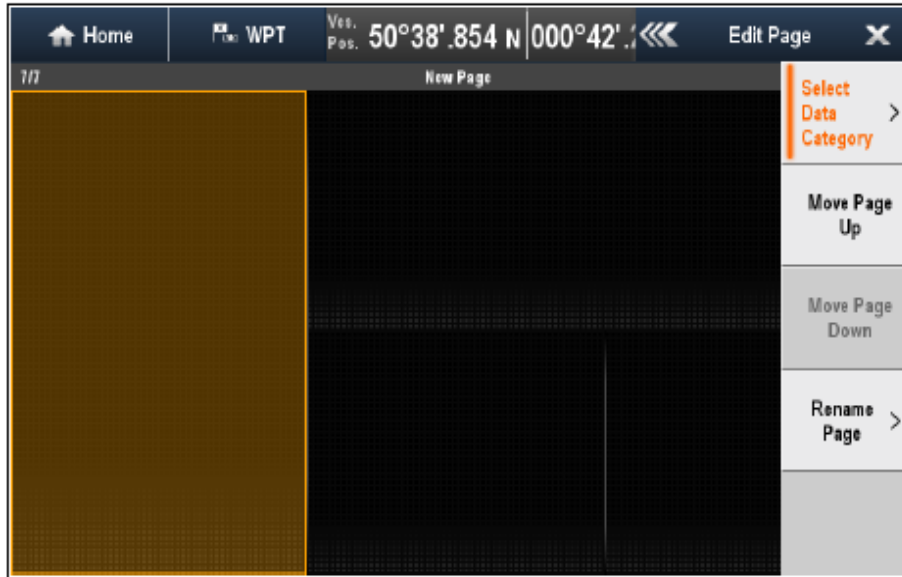

Customizing datapage content using touch

On touchscreen multifunction displays you can customize a data item by pressing and holding on the item onscreen.

From the Data application:

1. Display the datapage that contains the data item you want to change.
2. Touch and hold your finger on the data item.

After approximately 3 seconds the data item is highlighted and the **Select Data Category** menu is displayed.

3. Navigate the menu to locate the data item you want to use.
4. Select the data item.

The selected data item is now displayed in place of the original data item.



SINS2 Lighthouse Software

SINS2 Lighthouse User Interface

- Setup
 - Boat Type, Status, MMSI, Encryption, Data Logging
- Obstruction Alarm (Bridges/Contour)
- Collision Avoidance
- Event Markers
- Wpt at Range/Bearing from here
- Tracked Targets
- Target of Interest
- Target Intercept
- Text Messaging
- SAR Patterns



SINS2 Lighthouse User Interface

- Setup (Startup & HomeScreen)
 - Boat Type (in Startup Wizard)
 - Status
 - Vessel MSSI (in Startup Wizard)
 - Encryption
 - Lock Set-up

 - Data Logging


SINS2 Lighthouse User Interface

- Obstruction Alarms

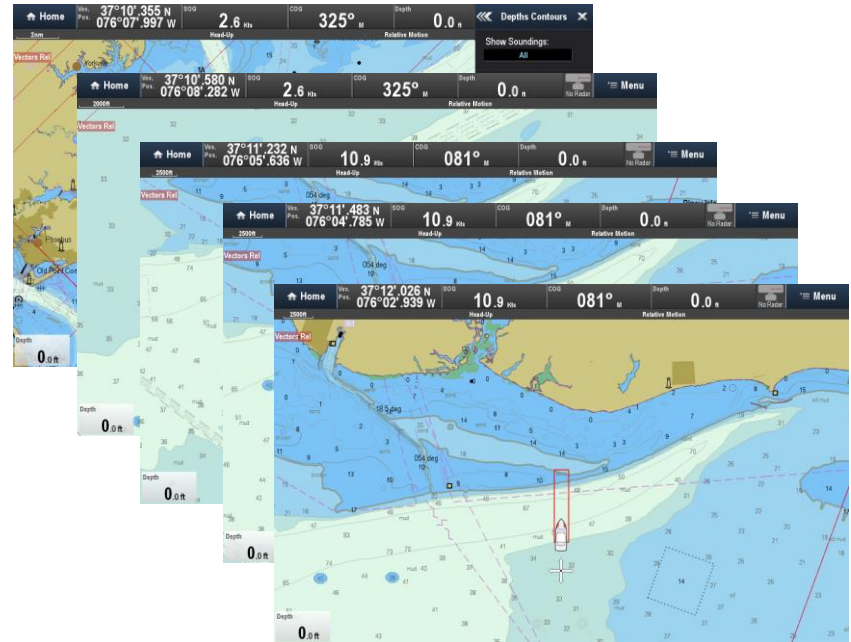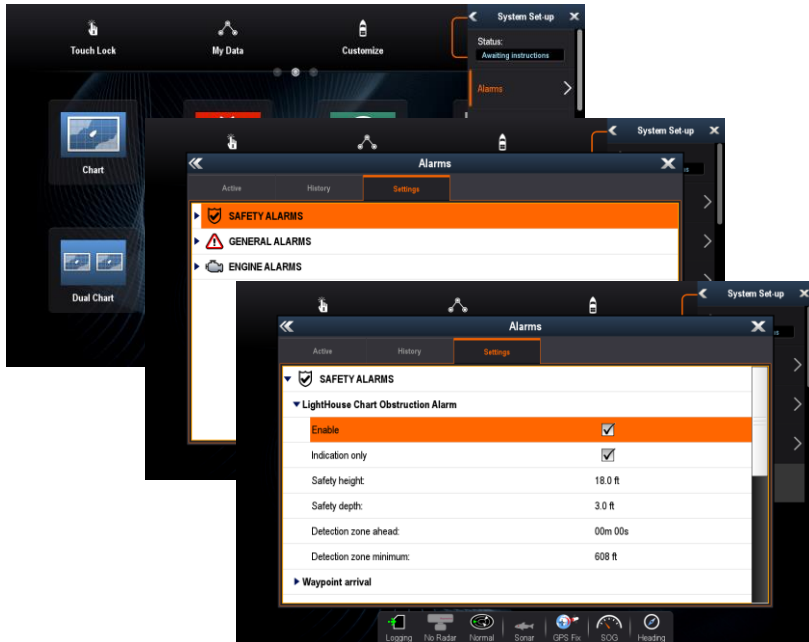


SINS2 Lighthouse User Interface

- Collision Avoidance
 - Dual Guard Zone
 - Dual VRM/EBL (floating)

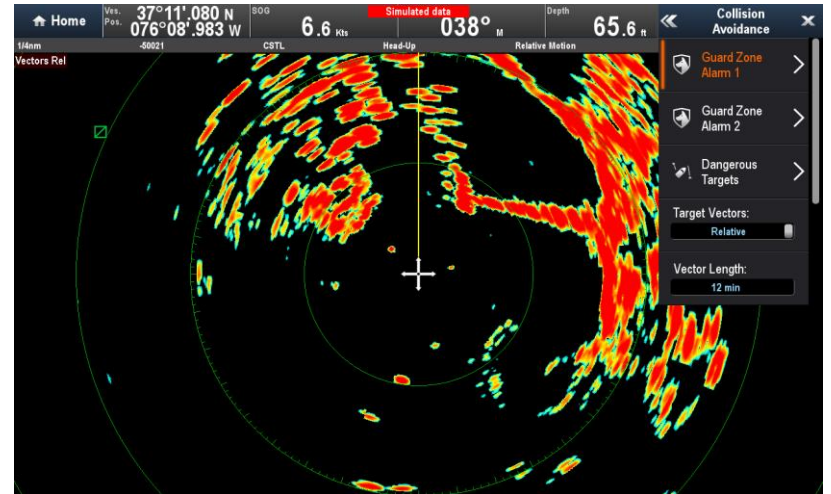


SINS2 Lighthouse User Interface

- Event Markers

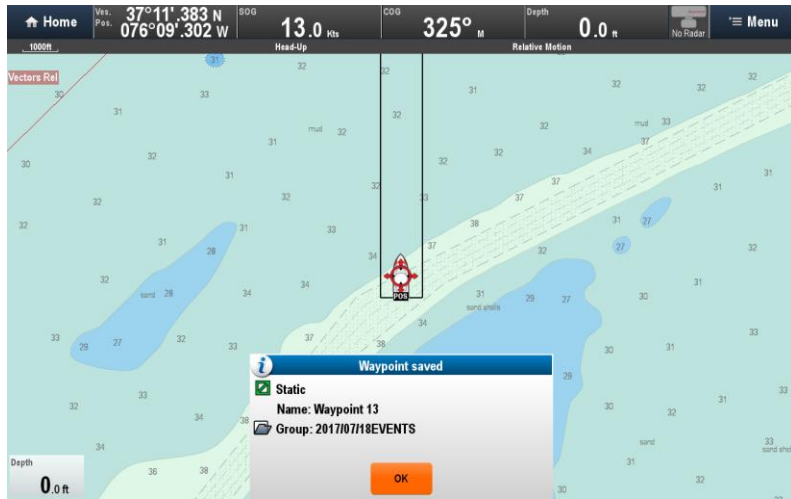

SINS2 Lighthouse User Interface

- Wpt at Range/Bearing from here

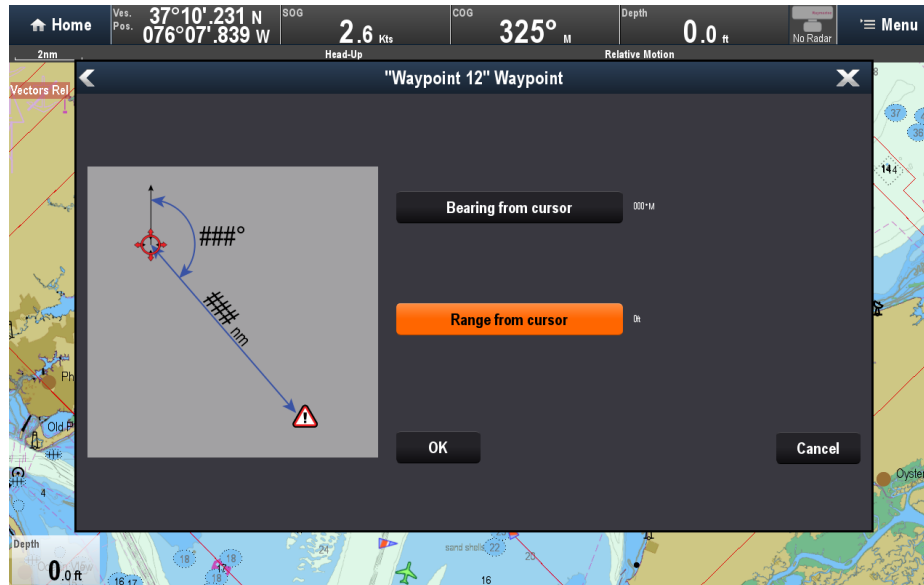

SINS2 Lighthouse User Interface

- Tracked Targets (Chart or Radar)
 - AIS, DSC, Intel, TOI

The screenshot displays the SINS2 Lighthouse interface with a tracked target list and a detailed view of the USSKENNEDY target. The target list includes the following data:

Name	Range	Bearing	CPA	TCPA
USSKENNEDY	3.02nm	73°S	2.13nm	07m 55s

The detailed view for USSKENNEDY shows the following information:

- 143424438
- USSAMERICA
- USS LITTLE ROCK
- ROT: 0°/sec
- COG: 329°M
- SDG: 10.1Kts
- Designate TOI

The screenshot displays the SINS2 Lighthouse interface with two radar displays. The top radar display shows a tracked target at a range of 1.3 kts and a heading of 032°. The bottom radar display shows a tracked target at a range of 6.9 kts and a heading of 047°. Both displays show a dense field of tracked targets in red and yellow colors.



SINS2 Lighthouse User Interface

- Target of Interest



SINS2 Lighthouse User Interface

- Target Intercept

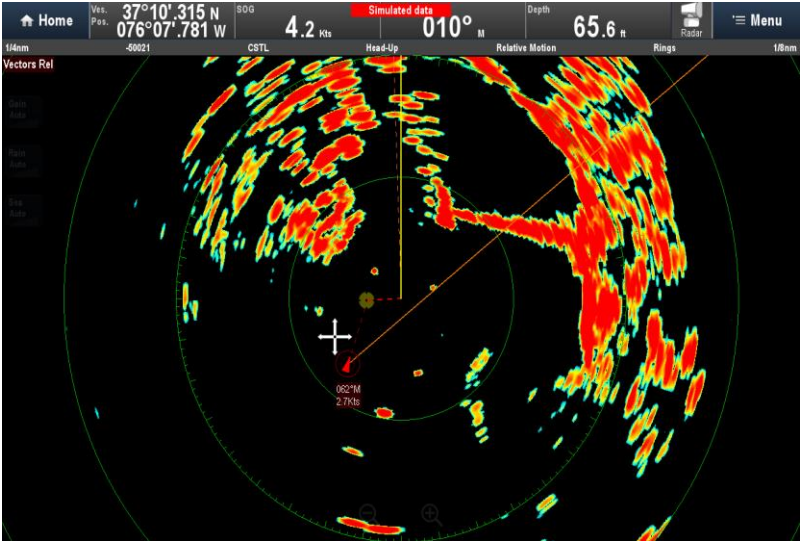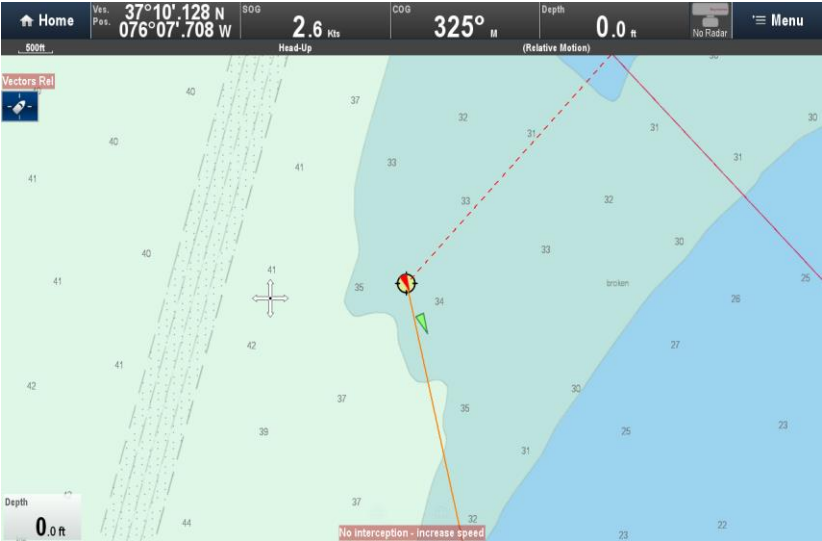


SINS2 Lighthouse User Interface

- Text Messaging



SINS2 Lighthouse User Interface

- SAR Patterns (STEDs Received)

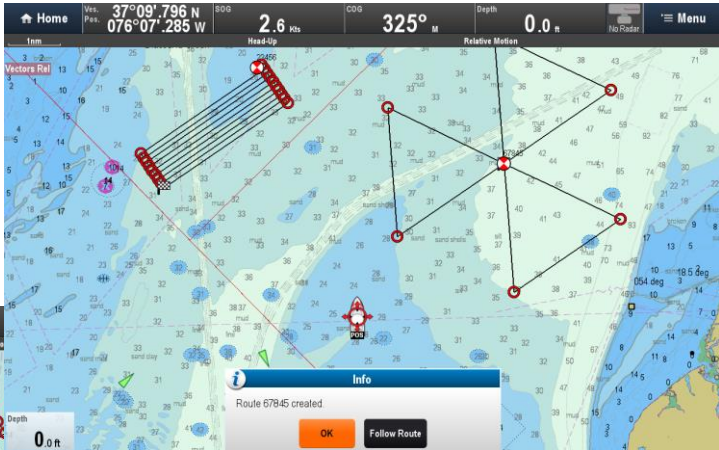

SINS2 Lighthouse User Interface

- SAR Patterns (Manual)

